


QUICK GUIDE


Food Ingredient Cleaner X1

① Correctly connect your charging cradle and fully charge the machine


② Rinse your ingredients with tap water, to remove the visible impurities like soil, dirt, etc.

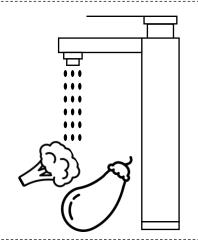

③ Immerse the machine into water, put your ingredients in, and wait for 6 minutes.

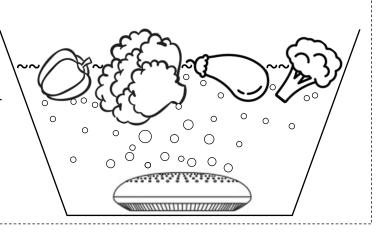

Take out your ingredients and rinse with tap water again for a few seconds.

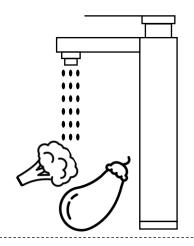

Now start cooking and enjoy your health food!

* See more details on the instruction manual